Read before installation.
All bolts have to be finaly tighten after installation all parts on vehicle.

Top case rack

CF Moto 800 MT-X 25

ID:3121125

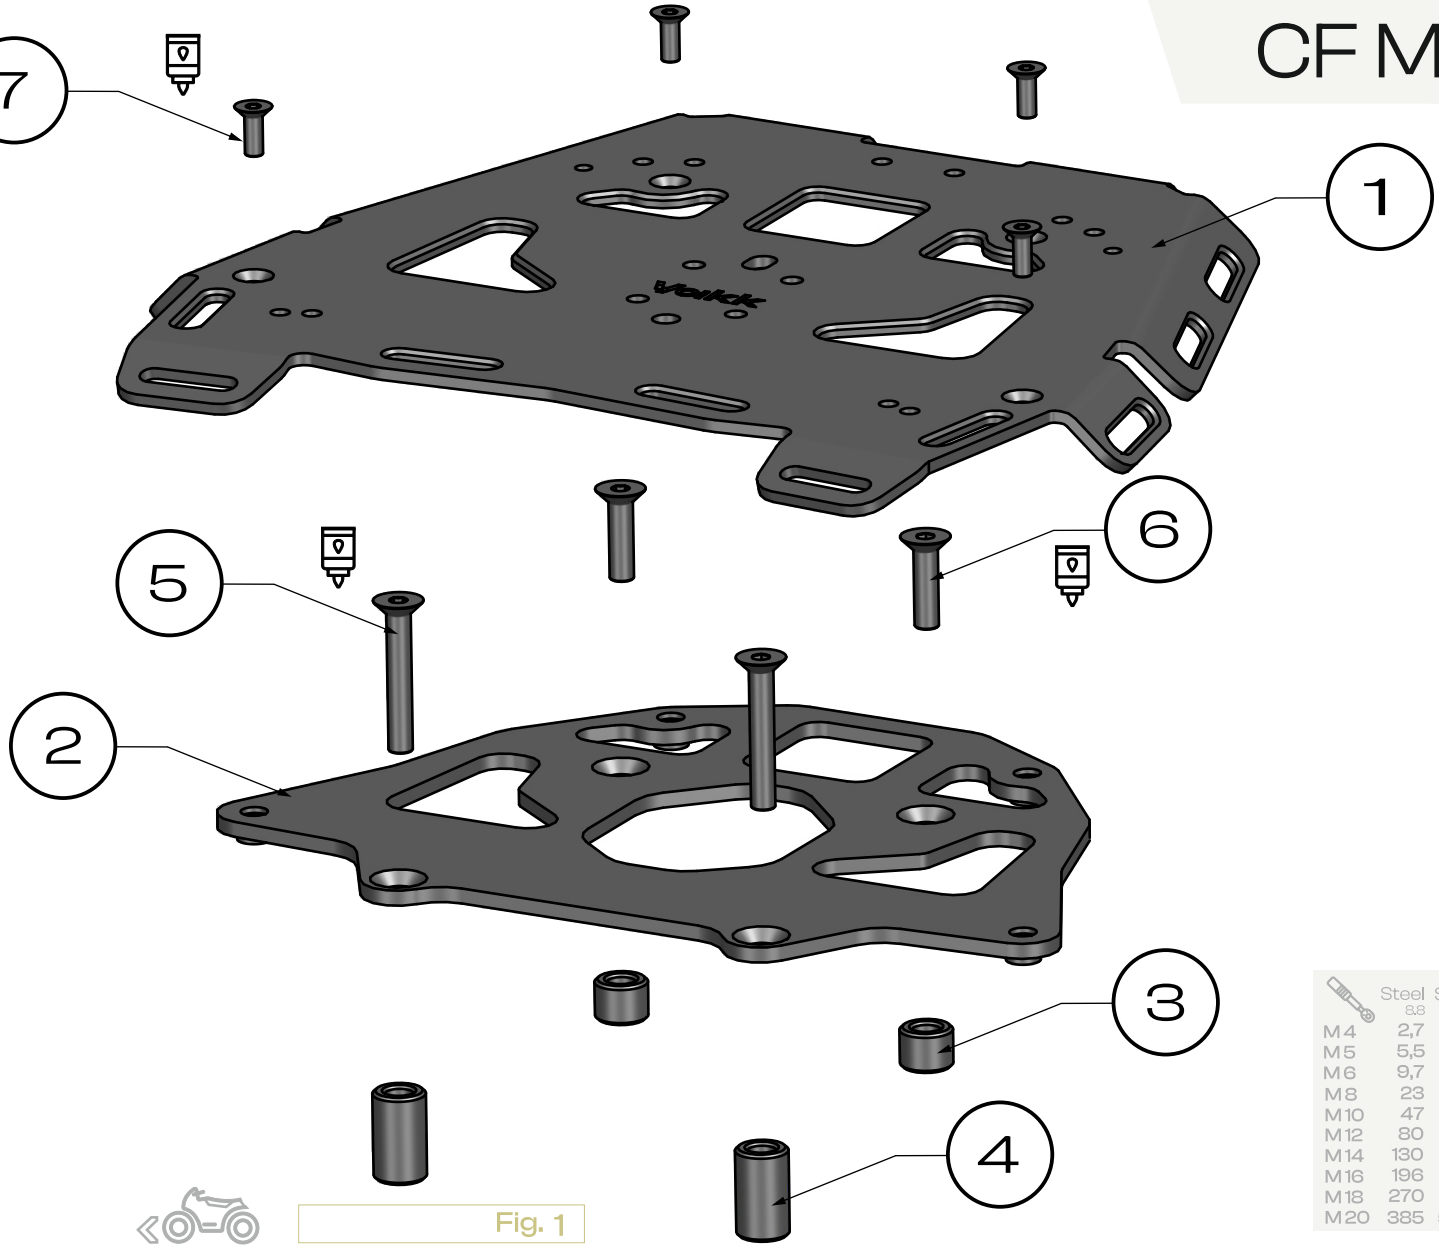

Fig. 1

1 Top case plate — 1×

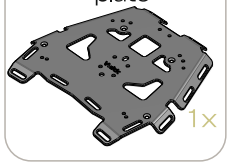

2 Mounting plate — 1×



3 Spacer — D17xd9xH29 — 2×



4 Spacer — D17xd9xH13 — 2×



5 Bolt — M8x50 -DIN 7991 — 2×



6 Bolt — M8x30 -DIN 7991 — 2×



7 Bolt — M6x16 -DIN 7991 — 4×



	Steel 8.8	Steel 10.9	Steel 12.9
M4	2,7	4	4.9
M5	5,5	8	9.8
M6	9,7	13,7	16
M8	23	33	40
M10	47	66	83
M12	80	116	150
M14	130	184	240
M16	196	287	350
M18	270	395	490
M20	385	560	690

one person — use a medium-stregth — tighten with torque — OEM Original Equipment Manufacturer

Yakk EXP

assembly instructions

yakkexp.com

EXPLORE POSSIBILITIES

!!! Initially, attach the screws loosely.
After assembling everything together, tighten them with the appropriate force.

follow yakkexp join #yakkherd

1. Unscrew and remove the plastic cover. **[Fig. 2]**
2. Insert spacer sleeves **[4] , [3]** into the holes. **[Fig. 3]**
3. Fasten the mounting plate **[2]** with bolts **[5]** at the front and **[6]** at the rear
   Apply a medium-strength threadlocker. **[Fig. 1] , [Fig. 4]**
4. Fasten Top case plate **[1]** to mounting plate **[2]** using bolts **[7].**
   Apply a medium-strength threadlocker. **[Fig. 1] , [Fig. 5]**

1 Top case plate — 1x

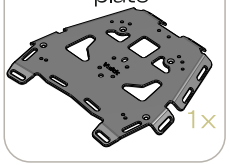

2 Mounting plate — 1x



3 Spacer — D17xd9xH29 — 2x



4 Spacer — D17xd9xH13 — 2x



5 Bolt — M8x50 -DIN 7991 — 2x



6 Bolt — M8x30 -DIN 7991 — 2x



7 Bolt — M6x16 -DIN 7991 — 4x



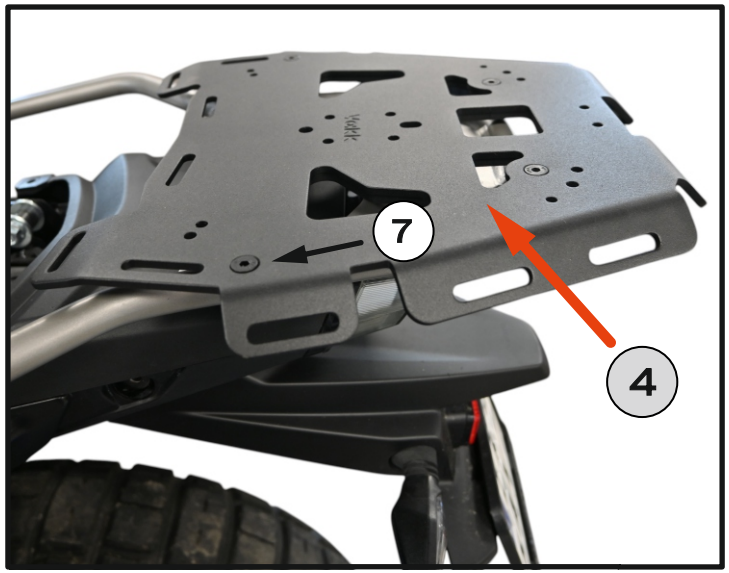

Fig. 5

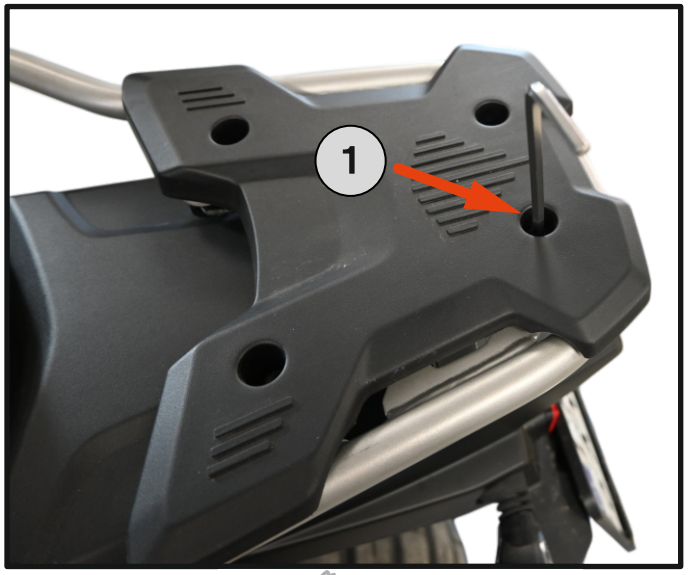

Fig. 2

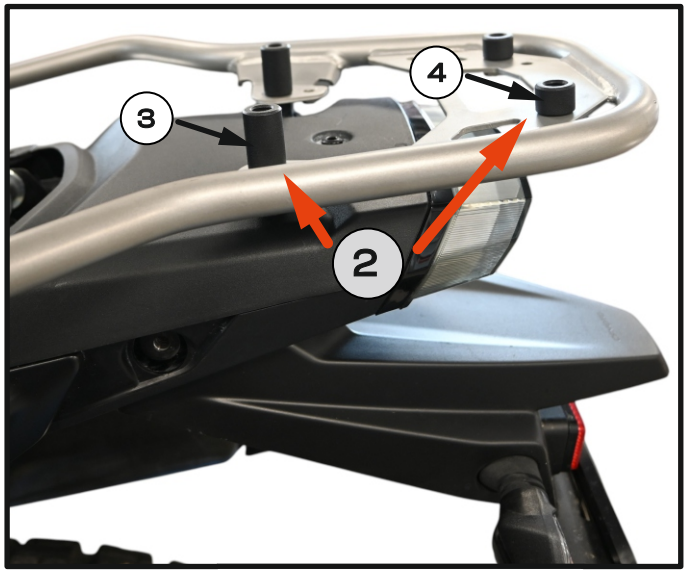

Fig. 3

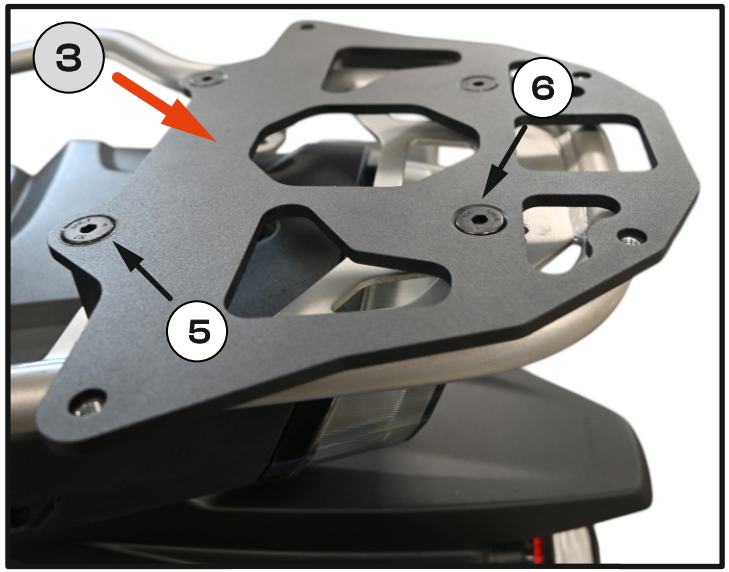

Fig. 4