Read before installation.

All bolts have to be finaly tighten after installation all parts on vehicle.

CF Moto 800 MT-X 25

ID:3121126

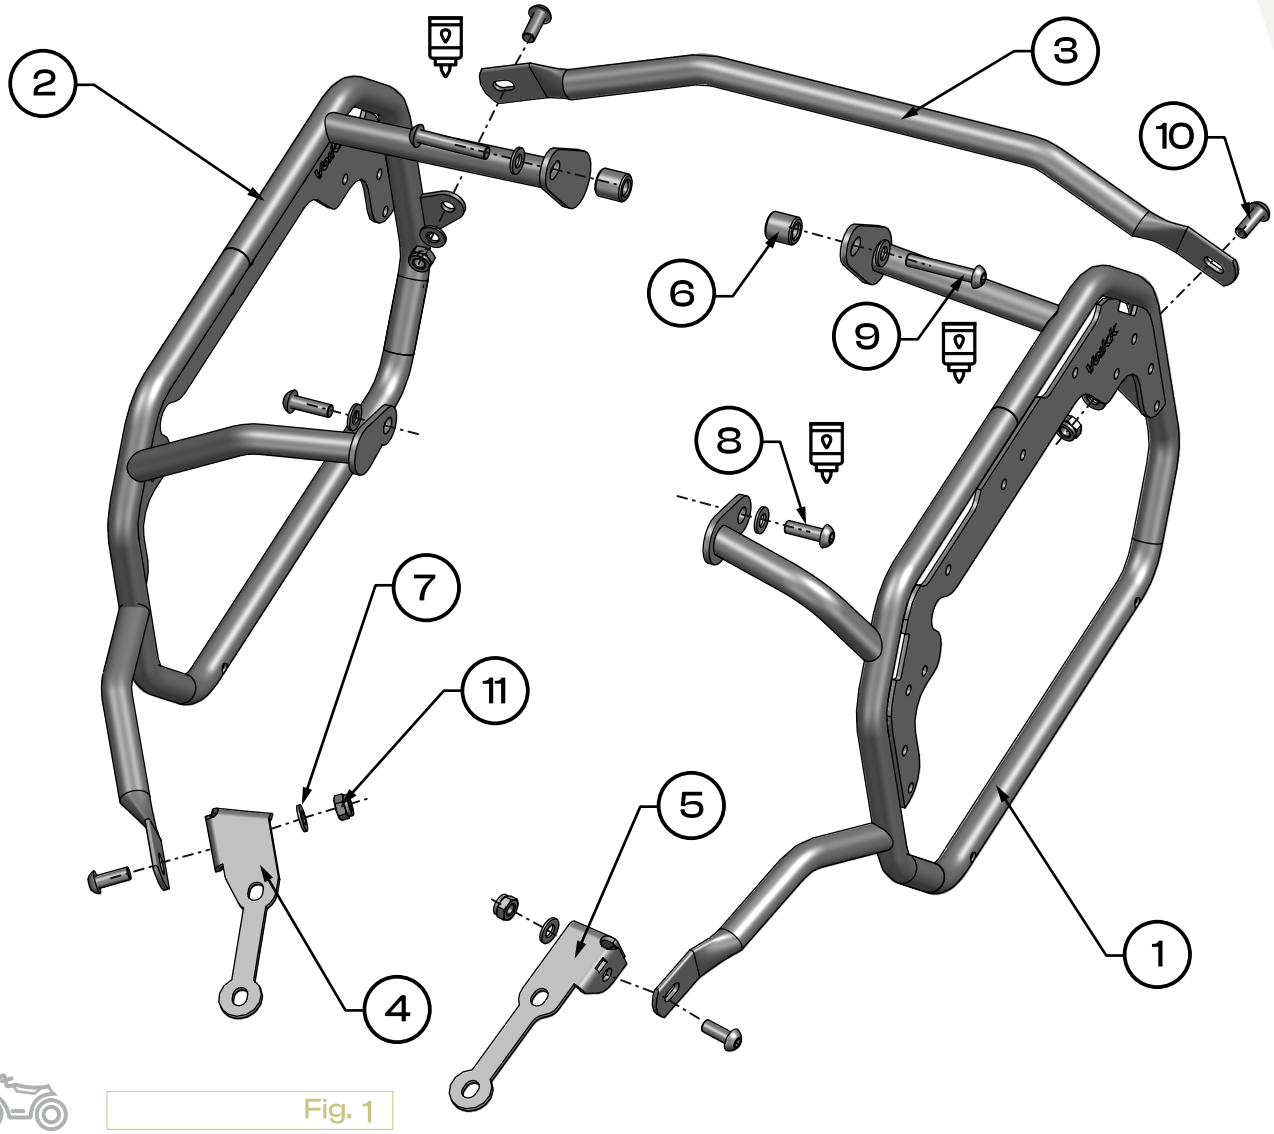

Fig. 1

1	Side carrier - Left	1×
2	Side carrier - Right	1×
3	Center bracket	1×
4	Footpeg right bracket	1×
5	Footpeg left bracket	1×
6	Spacer D17 x d9x H17	2
7	Washer M8-DIN 125	8×
8	Bolt M8x25 -DIN 7380	2×
9	Bolt M8x45-DIN 7380	2×
10	Bolt M8x20 -DIN 7380	4×
11	Nut M8-DIN 985	4×

	Steel 8.8	Steel 10.9	Steel 12.9
M4	2,7	4	4.9
M5	5,5	8	9.8
M6	9,7	13,7	16
M8	23	33	40
M10	47	66	83
M12	80	116	150
M14	130	184	240
M16	196	287	350
M18	270	395	490
M20	385	560	690

one person · use a medium-stregth · tighten with torque · OEM Original Equipment Manufacturer

!!! Initially, attach the screws loosely.
After assembling everything together, tighten them with the appropriate force.

1. Remove the seat. **[Fig. 2]**
2. Remove the plastic cover on the right side motocycle. **[Fig. 2]**
3. Unscrew and remove the exhaust. **[Fig. 3]**
4. Unscrew and remove the passenger footpegs on both sides . **[Fig. 3]**
5. Loosely install and fasten components **[4]** and **[5]** together with the passenger footrests using **OEM** bolts on both sides of the motorcycle. **[Fig. 1], [Fig. 4], [Fig. 5].** Use a medium - threadloccker
6. Resinstall and fasten the exhaust. **[Fig. 4]**
7. Resinstall and fasten plastic cover. **[Fig. 4]**

4 Footpeg right bracket 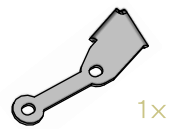 1x	5 Footpeg left bracket  1x

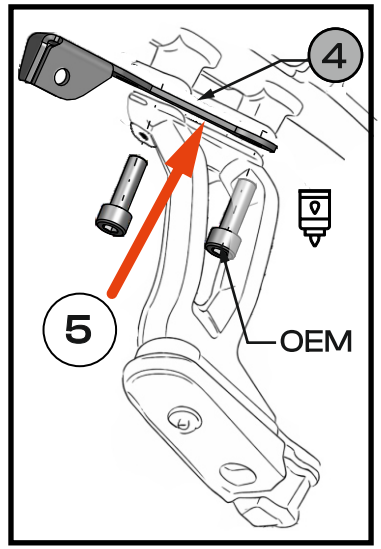

Fig. 5

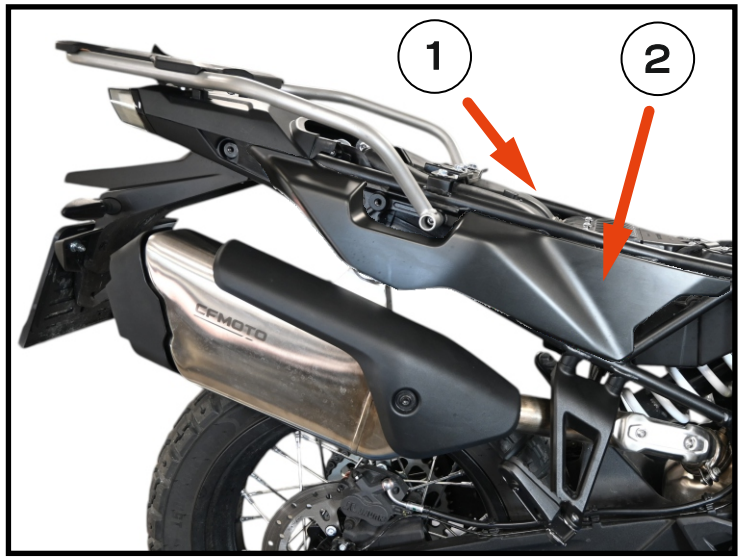

Fig. 2

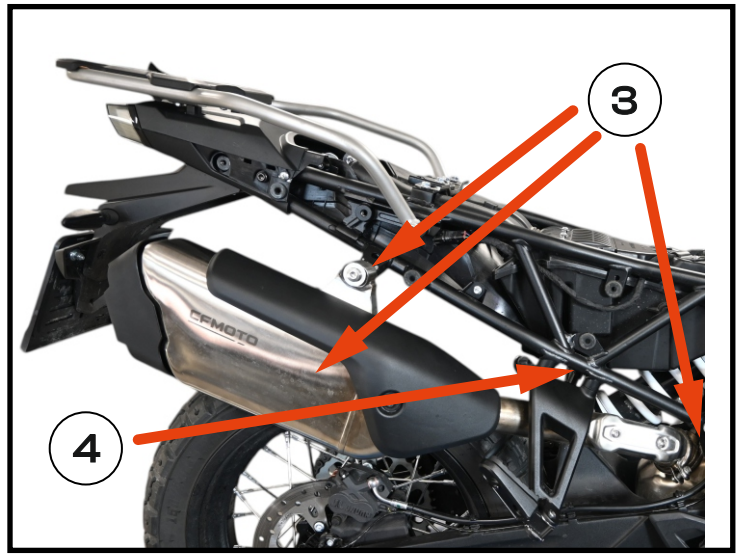

Fig. 3

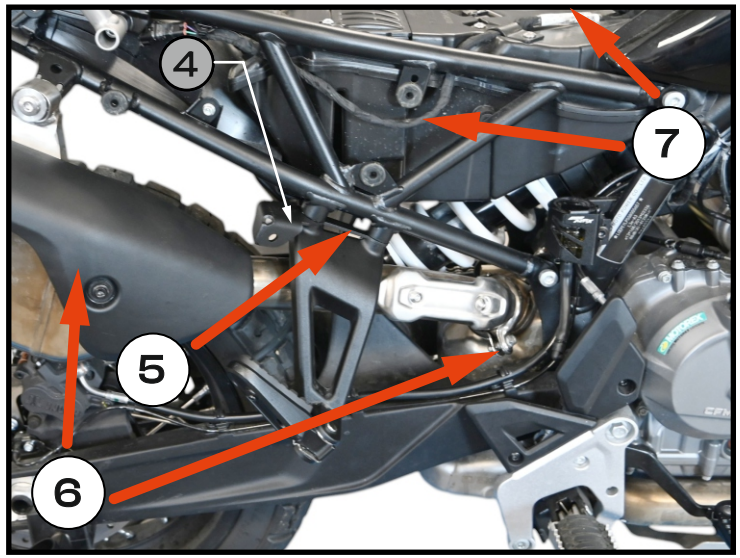

Fig. 4

!!! Initially, attach the screws loosely.
After assembling everything together, tighten them with the appropriate force.

8. Loosely install and fasten left and right side carriers **[1], [2]** on both sides of the motorcycle to the bracket using bolts **[10],** tightening nuts **[11]** trough warshers **[7]. [Fig. 1], [Fig. 6] , [Fig. 7]**

9. Loosely fasten on both sides of the motorcycle bolts **[8]** trough warshers **[7]. [Fig. 1], [Fig. 6] , [Fig. 7]**

10. Loosely fasten on both sides of the motorcycle bolts **[9]** trough warshers **[7]** and spacers **[6]. [Fig. 1], [Fig. 6] , [Fig. 7]**

Apply medium-strength threadlocker.

1 Side carrier - Left 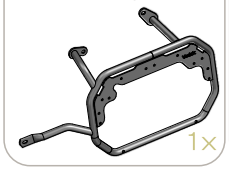 1x	2 Side carrier - Right 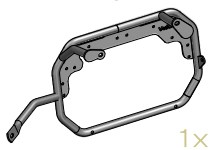 1x	6 Spacer  D17 x d9x H17 2x	7 Washer  M8-DIN 125 6x	8 Bolt  M8x25 -DIN 7380 2x	9 Bolt  M8x45-DIN 7380 2x
10 Bolt  M8x20 -DIN 7380 2x	11 Nut  M8-DIN 985 2x				

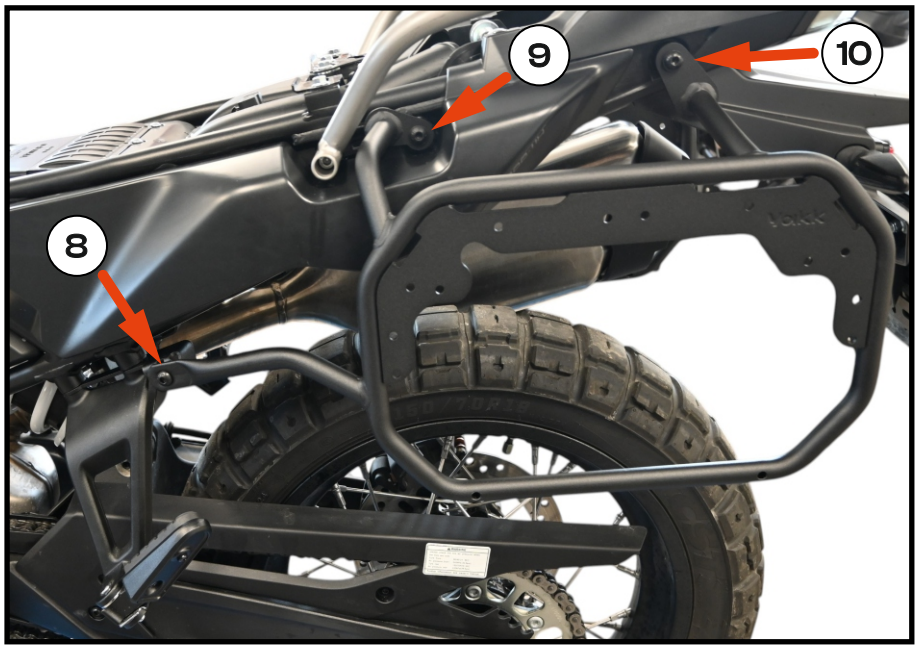

Fig. 6

Fig. 7

!!! Initially, attach the screws loosely.
After assembling everything together, tighten them with the appropriate force.

11. Loosely fasten the left and right side carriers **[1], [2]** to the center bracket **[3]**using bolt **[10]**, nut **[11],** and washer **[7]. [Fig. 1], [Fig. 8] , [Fig. 9]**

12. Resnstall and fasten the seat.

13. Align the **Side Carriers** with the motorcycle centerline. **Tighten all bolts to the specified torque. [Fig.1], [Fig.9],**

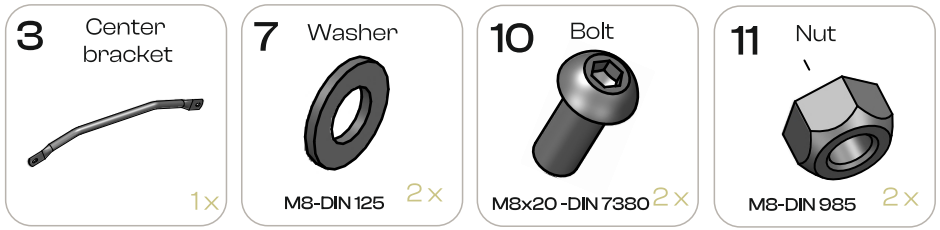

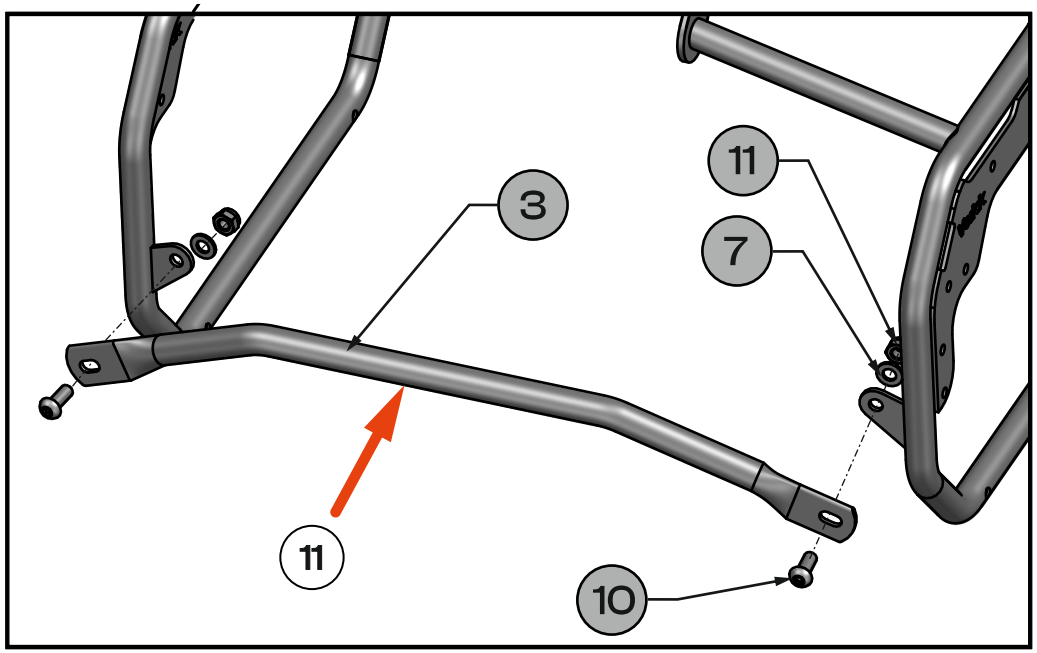

Fig. 8



Fig. 9